


# Polyethylene

## Fixing Point Guidelines


# ProSpare

The following fixing point recommendations are illustrative examples and for guidance only. These should be read in conjunction with the manufacturers Installation Guidelines.

### 2000 x 1000mm

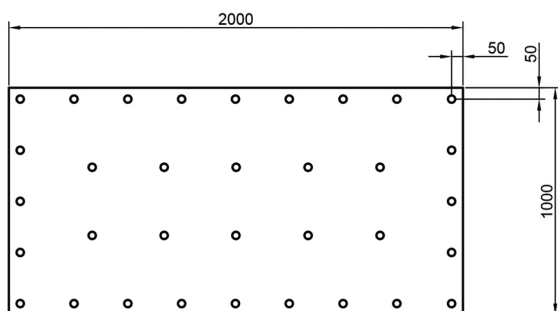

### 3000 x 1250mm

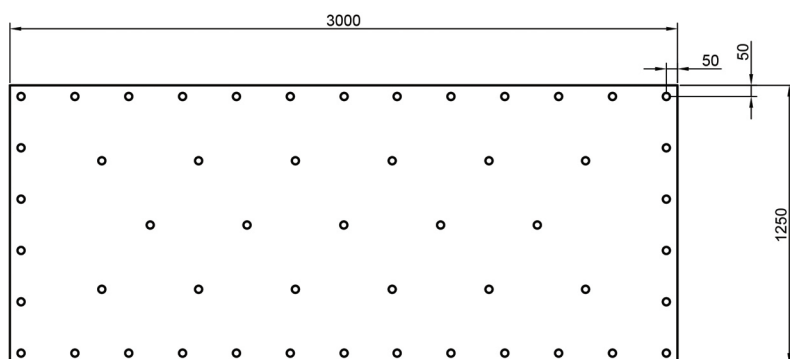

It is important to fix securely around the sheet edge. Fixing points should be 50mm from sheet edge with a spacing of 200 - 250mm between each point. For the middle section a spacing of 350 - 400mm is recommended between each point. This equates to 12-15 fixing points per M<sup>2</sup>.

Many variables affect optimum fixing point location for specific applications, such as temperature, sheet thickness and vessel construction. Please contact our Sales Office for specific recommendations or complete and return our application questionnaire.

ProSpare supply a range of specialist fixing systems, prices on request.

**ProSpare**

Bestwood Road • Pinxton • Nottinghamshire NG16 6NT  
Tel • +44 (0)1773 814008 • Fax • +44 (0)1773 860055 • Email • sales@prospare.co.uk

[prospare.co.uk](http://prospare.co.uk)

We reserve the right to modify or withdraw specifications or products without notice or obligation.